

P

P

O

O

N

N

M

M

L

L

K

K

J

J

I

I

H

H

G

G

F

F

E

E

D

D

C

C

B

B

A

A

CUSTOMER CONNECTIONS (STANDARD)

CUSTOMER CONNECTIONS (OPTIONAL)

S2,S3,S4 AND S5
S6,S7,S8 AND S9
K1
K2
K3
CB
CBI
MI
C1
COMMI

NORMAL POSITION AUXILIARY SWITCH
EMERGENCY POSITION AUXILIARY SWITCH
OPEN EMERGENCY RELAY
OPEN NORMAL RELAY
CLOSE RELAY
MAIN CIRCUIT BREAKER
CIRCUIT BREAKER
LINEAR MOTOR
MOTOR RUN CAPACITOR
USB TO RS485 COMMUNICATIONS DEVICE





